

GreenTek®

Trusted by the best in the game

DYNA-SEEDER

OPERATOR'S MANUAL



INTRODUCTION

Congratulations on the purchase of your Dyna-Seeder units. To ensure the safe and long lasting operation of these machines, you and anyone using them should read and understand this user's manual. Also ensure that you understand and practice the safety rules, as described in this manual.

This machinery is guaranteed against material and assembly errors. This guarantee applies for a period of 12 months, as from the date of purchase.

SAFETY INSTRUCTIONS

1. Never disconnect or shortcut any of the safety devices.
2. Every user must be fully informed and understand the safe use of this machine.
3. Inspect the ground, where the Dyna-Seeders are to be used. Remove loose obstacles, and avoid uneven areas.
4. Drive carefully during work and during transport.
5. Ensure that other people are standing at least 4 mtr./ 12 ft away from the machine during work and transportation.
6. Use appropriate clothing. Wear strong shoes with steel toe caps, long trousers, gloves, tie up long hair and use protective glasses for your eyes.
7. Never overload the Dyna-Seeders.
8. Check the Dyna-Seeders at least once a week, to ensure there are no loose bolts and nuts. Check for any damage, and maintain as needed.
9. The Dyna-Seeders must never be used without protective guards in place and safety decals.
10. Use only original DYNA-SEEDERS spare parts, in order to ensure the safe operation of the machine.
11. Never use the Dyna-Seeders in the dark, in heavy rains, on frozen grounds, stony conditions and/ or on slopes steeper than 30 degrees.
12. Maintain a log book of repairs
13. Be aware that changes to the Dyna-Seeders releases GreenTek from any CE obligations.
14. Wear certified ear protection if the machine is used for more than 2 hours.

IMPORTANT

The required hydraulic power depends on the working depth, soil conditions, working speed etc. The ambient temperature and the greens mower condition determine the available capacity of the greensmower. The driver must monitor and control the greensmower during work to prevent overloading.

GreenTek does not take any liability for damage caused to greensmowers through inappropriate use.

TECHNICAL SPECIFICATIONS

- Model : GT 410 (fine seed) GT 412 (normal seed) REV 051
- Working width : 520 mm/ 21" per head
- Working depth : 7-15 mm/ 0.28- 0.60"
- Hole spacing : 20 x 45 mm/ 0.80 x 1.77"
- Driving speed : 0.5- 4.8 km/h / 0.3- 3 mph
- Dosing rate : Fescue: 0.17-1.00 kg/100 m²/0.03- 0.20 lbs/sqft
- Penn: 0.38- 1.45 kg/100m²/ 0.07 – 0.30 lbs/sqft
- Weight : 64 Kg/ 140 lbs per head.
- Overall Dimensions : 72 x 44 x 24 cm / 29 x 18 x 10"

OPERATING TIPS

1. Do not use the Dyna-Seeder units in wet conditions. The seed funnels may clog.
2. You can check the dosing yourself. 10.5 revs of the front roller matches 1 sq mtr. (or 9.4 revs matches 10 sq feet). Measure the weight of seed and you know the dosing per sq. mtr. or per 10 sq. ft.
3. Clean the unit regularly with compressed air. If necessary, wash off with a low pressure hose pipe, and dry off thoroughly with compressed air. **DO NOT USE A PRESSURE WASHER ON THEM AT ANY TIME.**
4. The guide shoes around the spiker disks should be kept aligned sideways so that the spikers are running in the centre of the slots.
5. The Dyna-Seeder units may be used to apply fertilizer, provided it can be fed through the dosing shaft. **CLEAN THE UNIT THOROUGHLY WITH COMPRESSED AIR IMMEDIATELY AFTER USE.**
6. Operate at around half throttle until you are familiar with the operation and the effect on the turf. Then adjust rpm to suit requirements.
7. If the holes are not deep enough, slow down on driving speed and/ or increase the engine rpm's, so that the vibrations per spike increases.
8. The spare gear wheels may be taken off the machine and stored elsewhere if you wish.
9. Be careful when lowering the units onto a hard (concrete) floor. **ALWAYS USE THE PROPER STORAGE TROLLEYS TO STORE YOUR UNITS WHEN NOT IN USE.** Otherwise, damage to the heads may occur.
10. Check bolts and nuts regularly.


INITIAL SETUP

The units are delivered as a standard Right Hand driven base unit. A fitting kit is added to mount the unit to specific models of greensmowers, see the instructions supplied with the parts kit itself.


It may also be necessary to change the drive side of one unit, depending on the greensmower model. Change from Right to Left Hand Drive as follows:

CHANGING THE DRIVE SIDE:

Parts may be easily changed from right to left. This point should always face towards the front side.

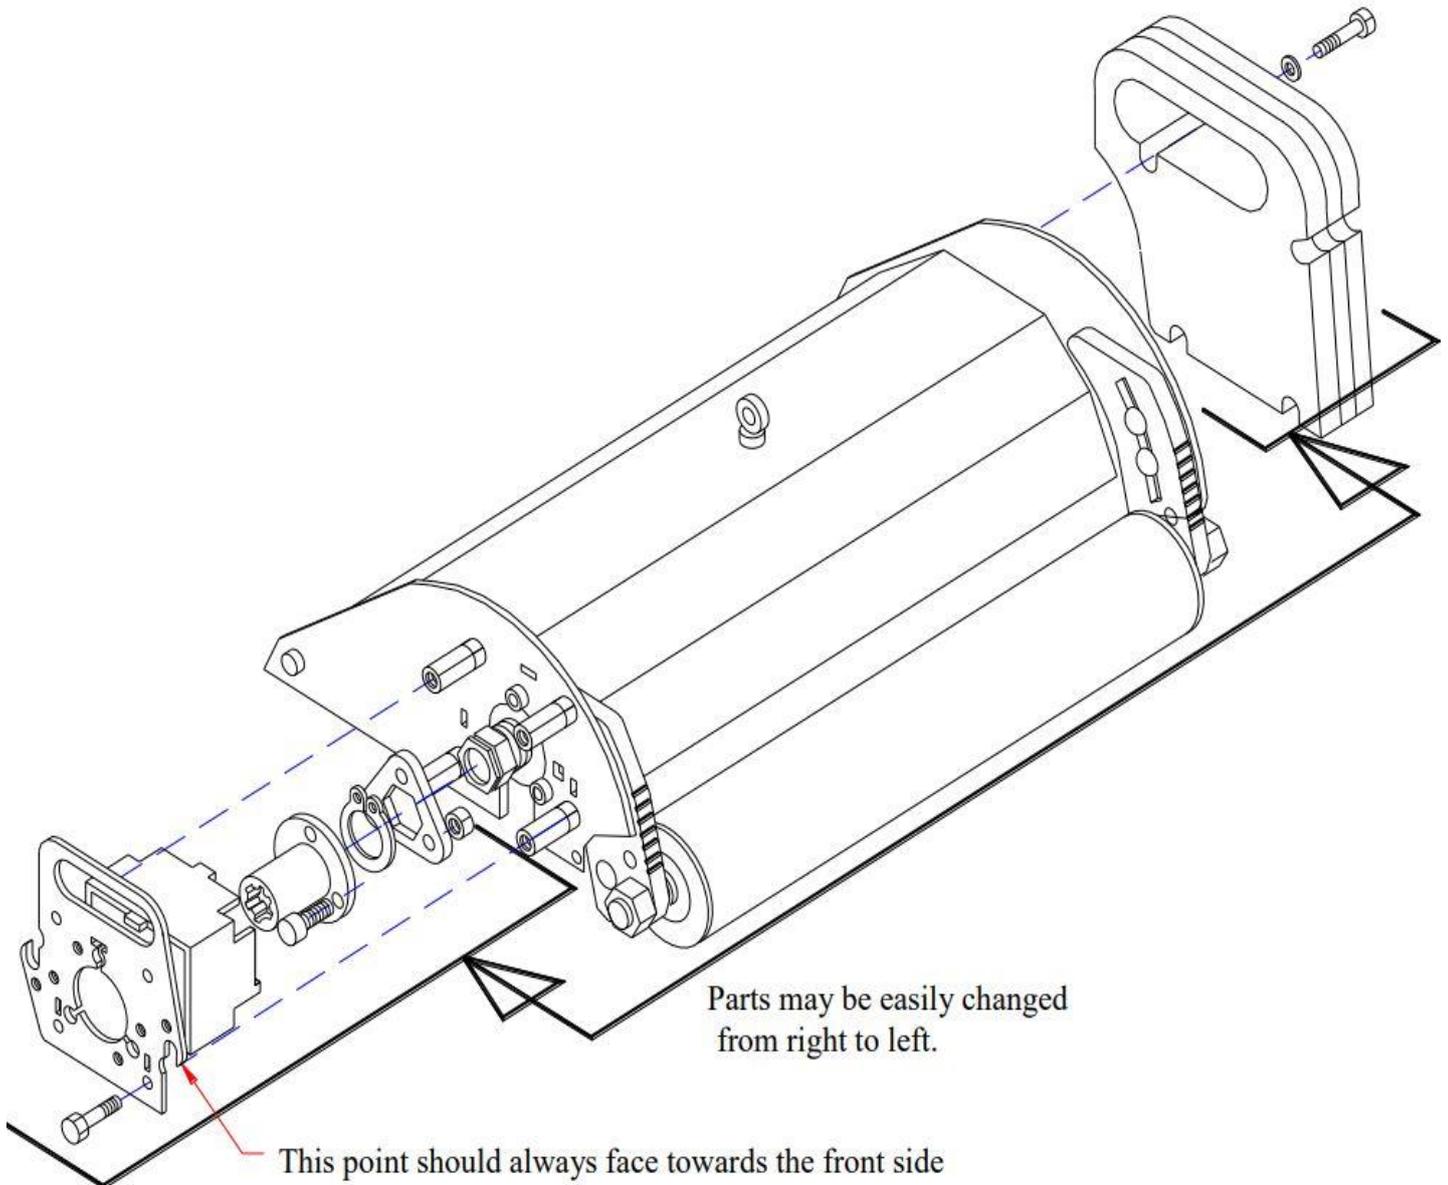

DYNA-SEEDER

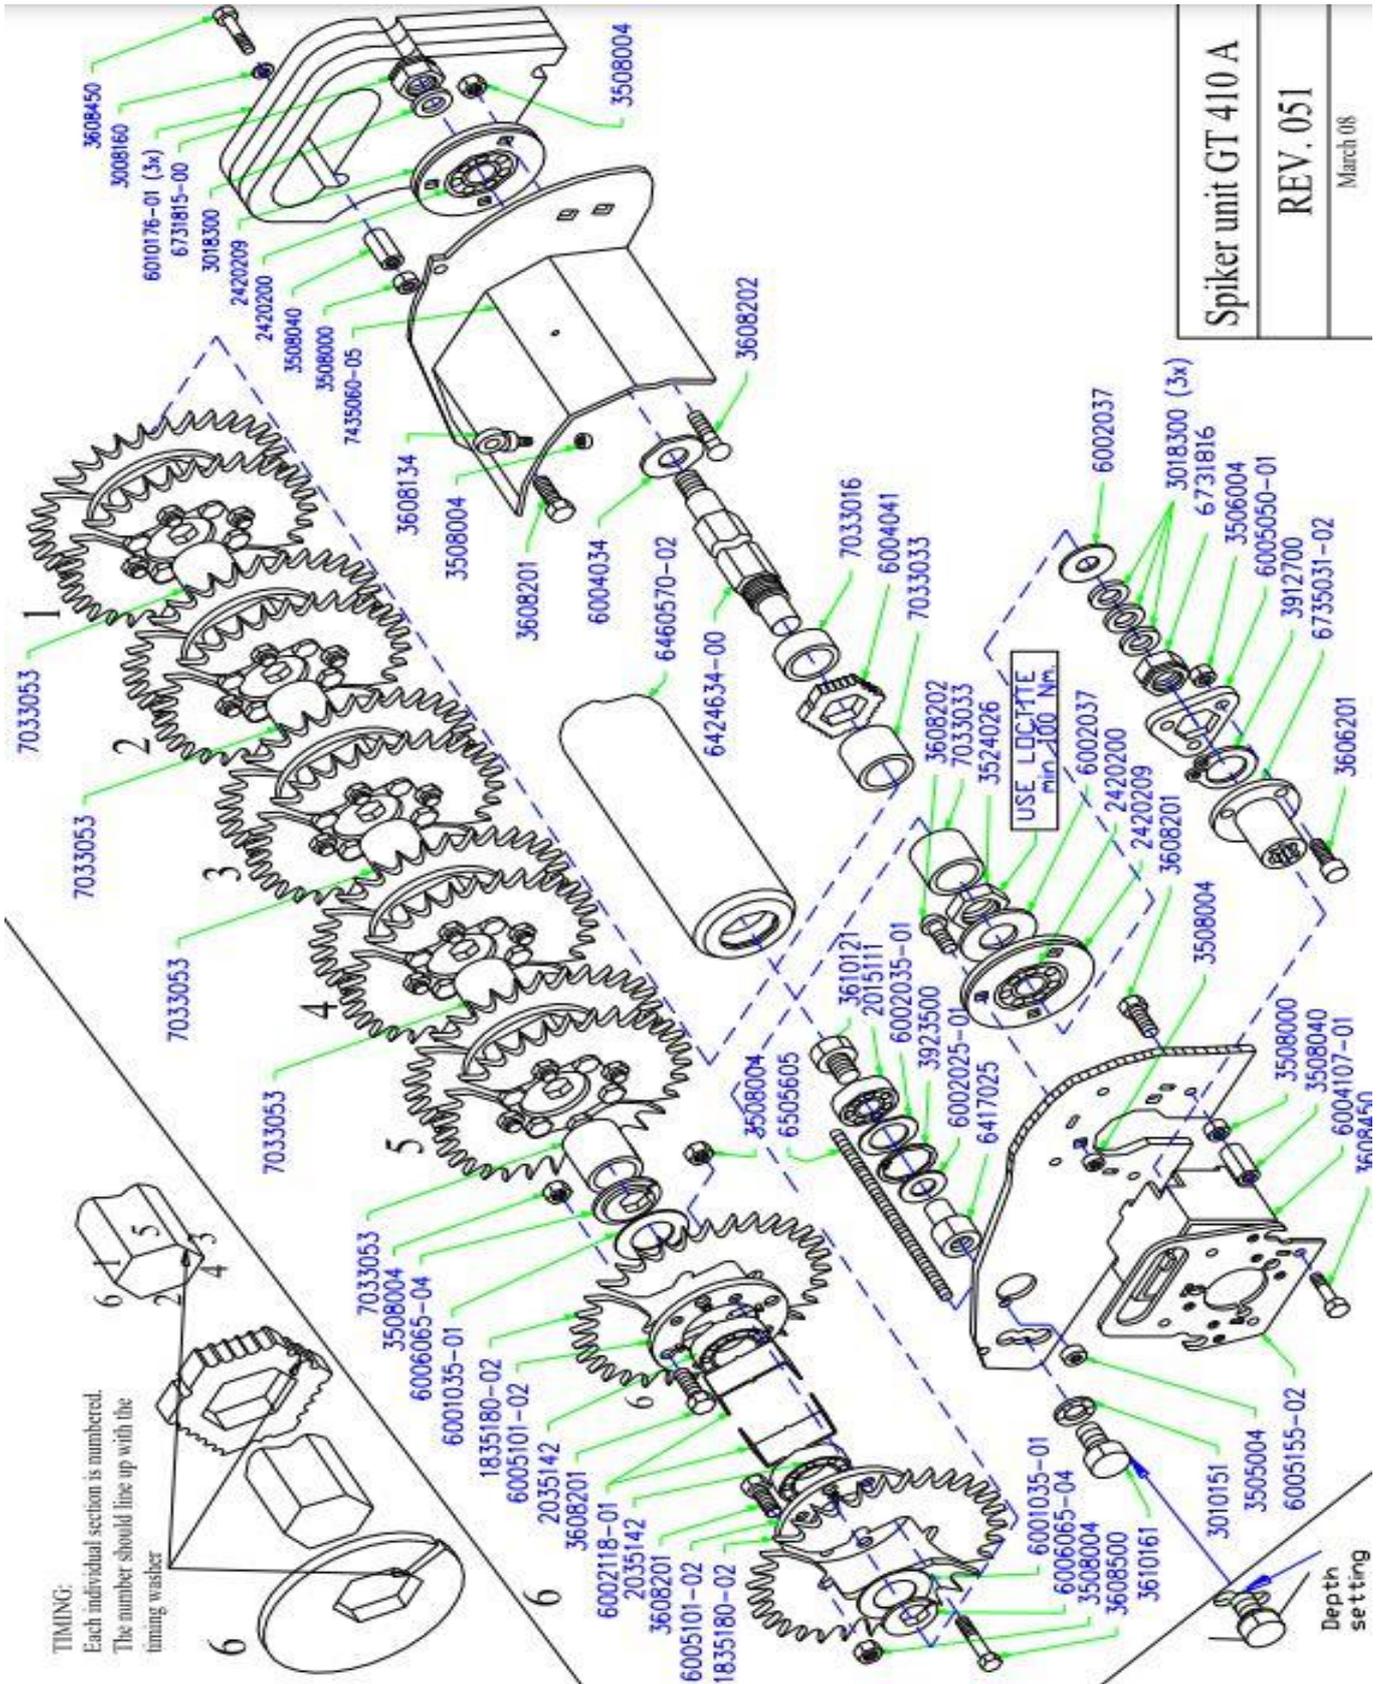


GreenTek

Trusted by the best in the game

Tel: +44 (0)113 267 7000
Email: info@greentek.uk.com
Web: www.greentek.uk.com

DYNA-SEEDER

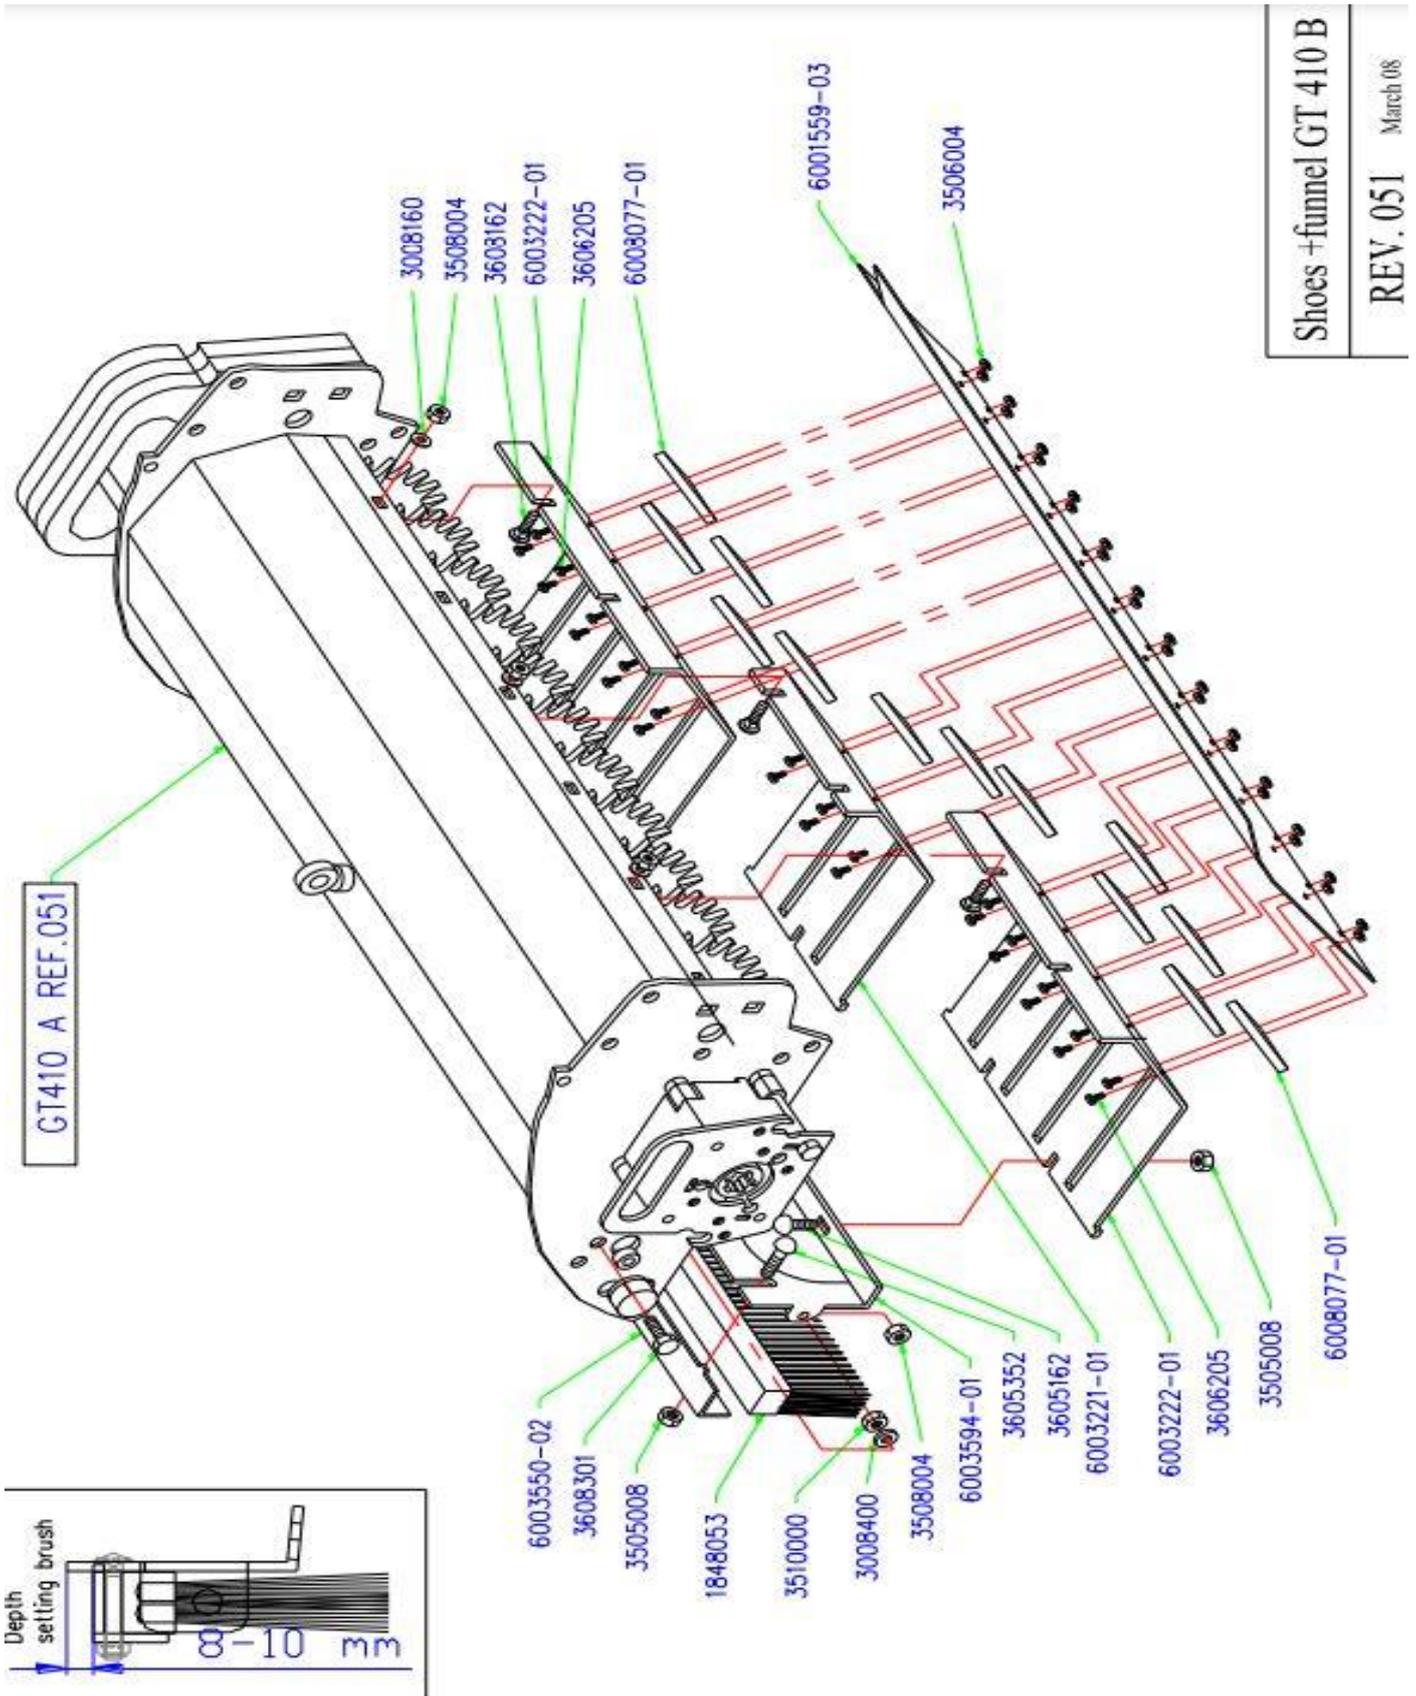


GreenTek


Trusted by the best in the game

Tel: +44 (0)113 267 7000
Email: info@greentek.uk.com
Web: www.greentek.uk.com

DYNA-SEEDER

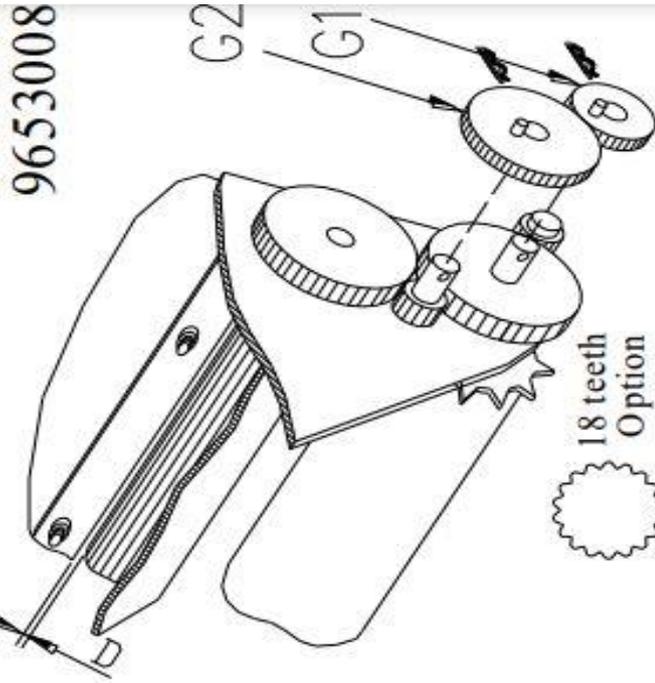

9653008

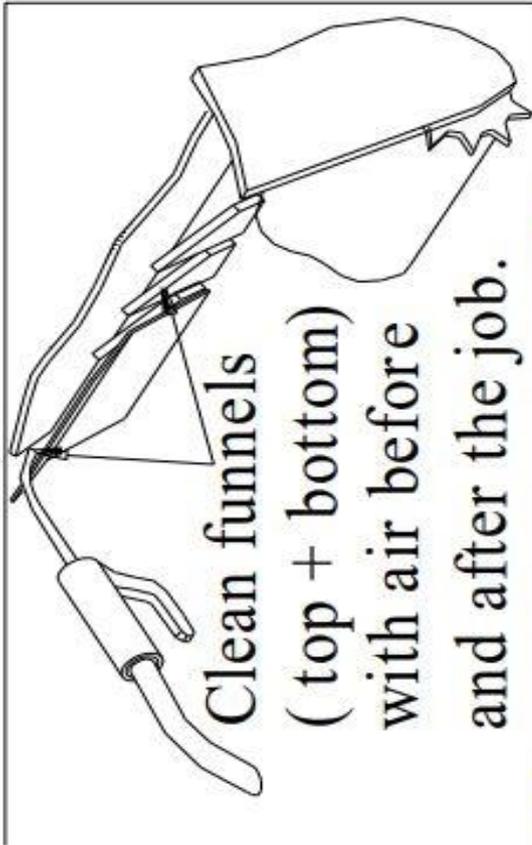

36 teeth
USA



24 teeth
Standard

18 teeth, D=0.5 mm/ 0.02"

G1	G2	Fescue/Ray		Penn	
		Kg/100 m ²	Lbs/100 sqft	Kg/100 m ²	Lbs/100 sqft
20	60	0.22	0.04	0.63	0.13
30	50	0.40	0.08	1.40	0.29
40	40	0.66	0.14	1.90	0.39
50	30	1.00	0.20	2.80	0.57

36 teeth, D=0.1 mm/ 0.004"

G1	G2	Fescue/Ray		Penn	
		Kg/100 m ²	Lbs/100 sqft	Kg/100 m ²	Lbs/100 sqft
20	60	-	-	0.38	0.07
30	50	-	-	0.80	0.16
40	40	-	-	1.10	0.23
50	30	-	-	1.45	0.30

24 teeth, D=0.5 mm/ 0.02"


G1	G2	Fescue/Ray		Penn	
		Kg/100 m ²	Lbs/100 sqft	Kg/100 m ²	Lbs/100 sqft
20	60	0.17	0.03	0.50	0.10
30	50	0.36	0.07	1.10	0.23
40	40	0.48	0.10	1.50	0.31
50	30	0.70	0.14	1.95	0.40

GreenTek


Trusted by the best in the game

Tel: +44 (0)113 267 7000
 Email: info@greentek.uk.com
 Web: www.greentek.uk.com

ADJUSTMENTS

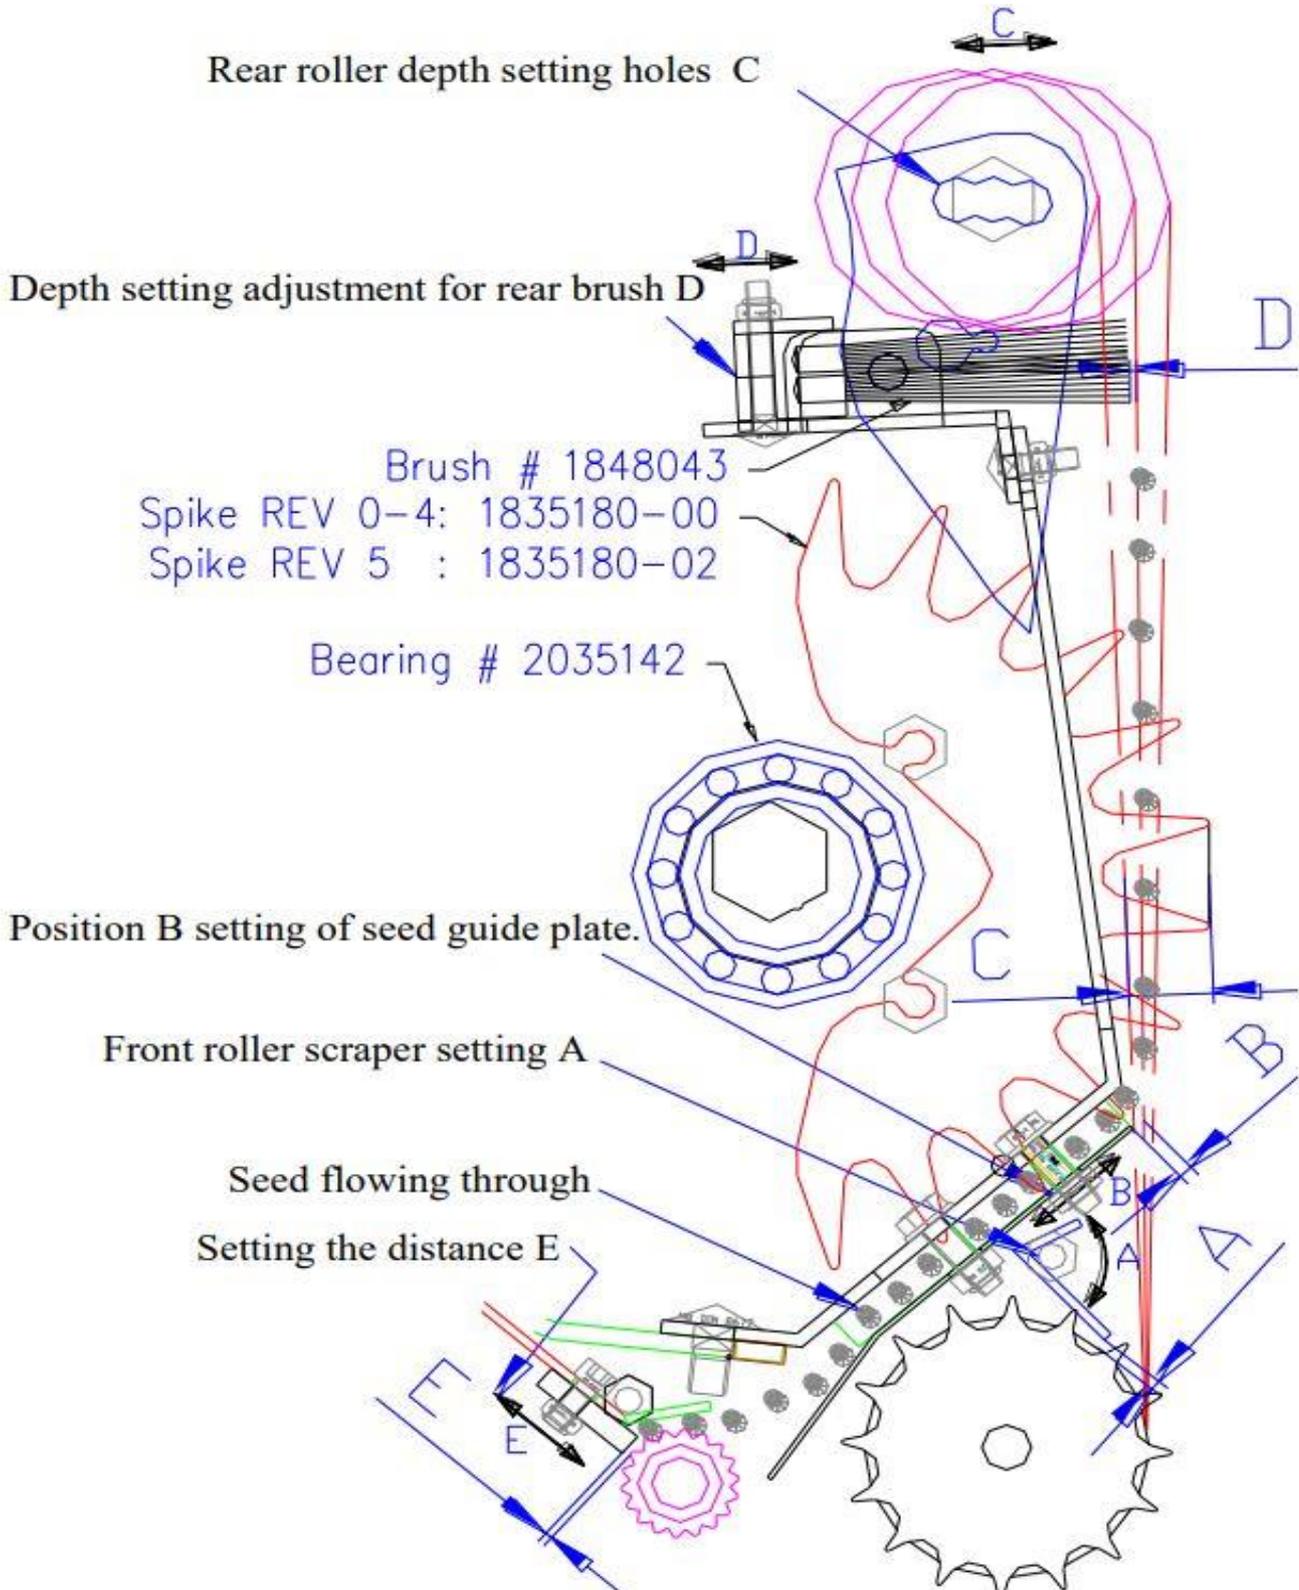


CHANGING THE DOSING SHAFT

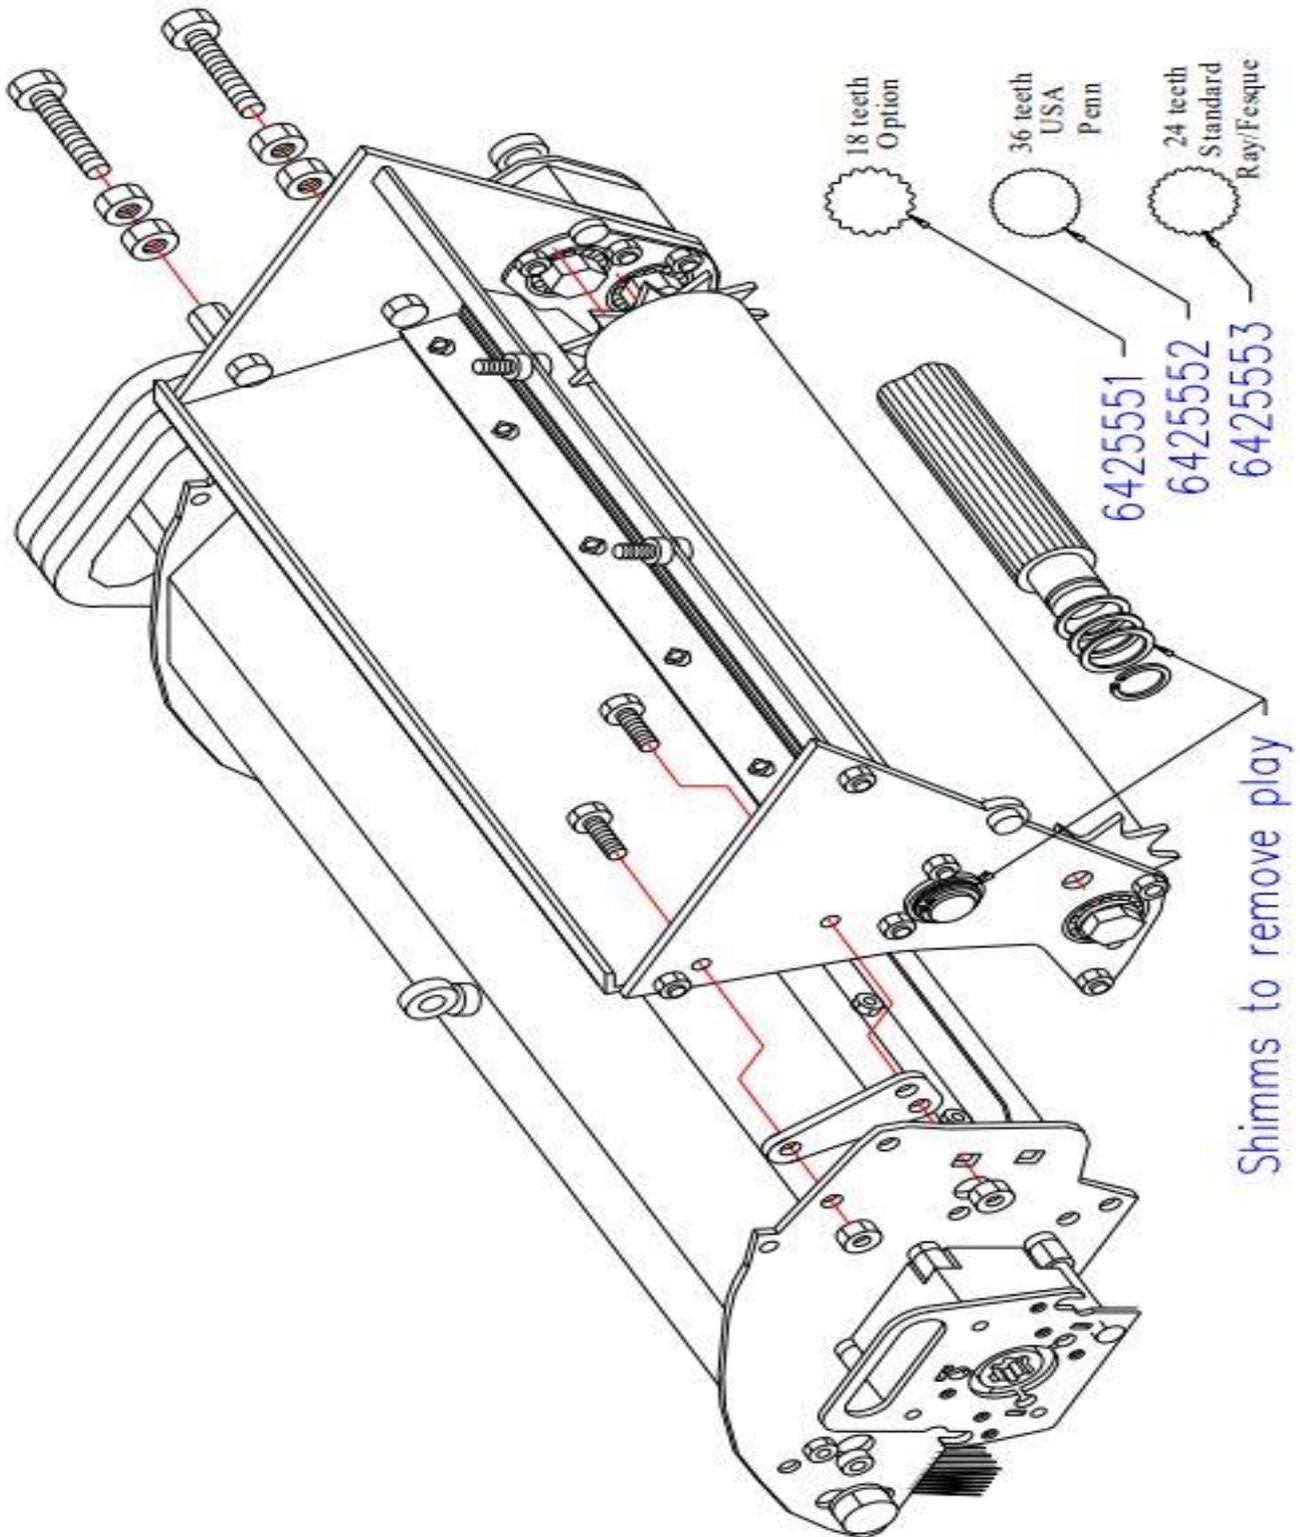

MAINTENANCE

1. Check tightness of all bolts and nuts on each occasion of use.
2. Clean out seed funnels after each use with compressed air.
3. Clean off units using compressed air. If necessary, use a low pressure hosepipe but do not direct it into the roller bearings or spiker shaft bearings. Blow off all water afterwards with compressed air. **DO NOT USE A PRESSURE WASHER ON THESE UNITS EVER.**

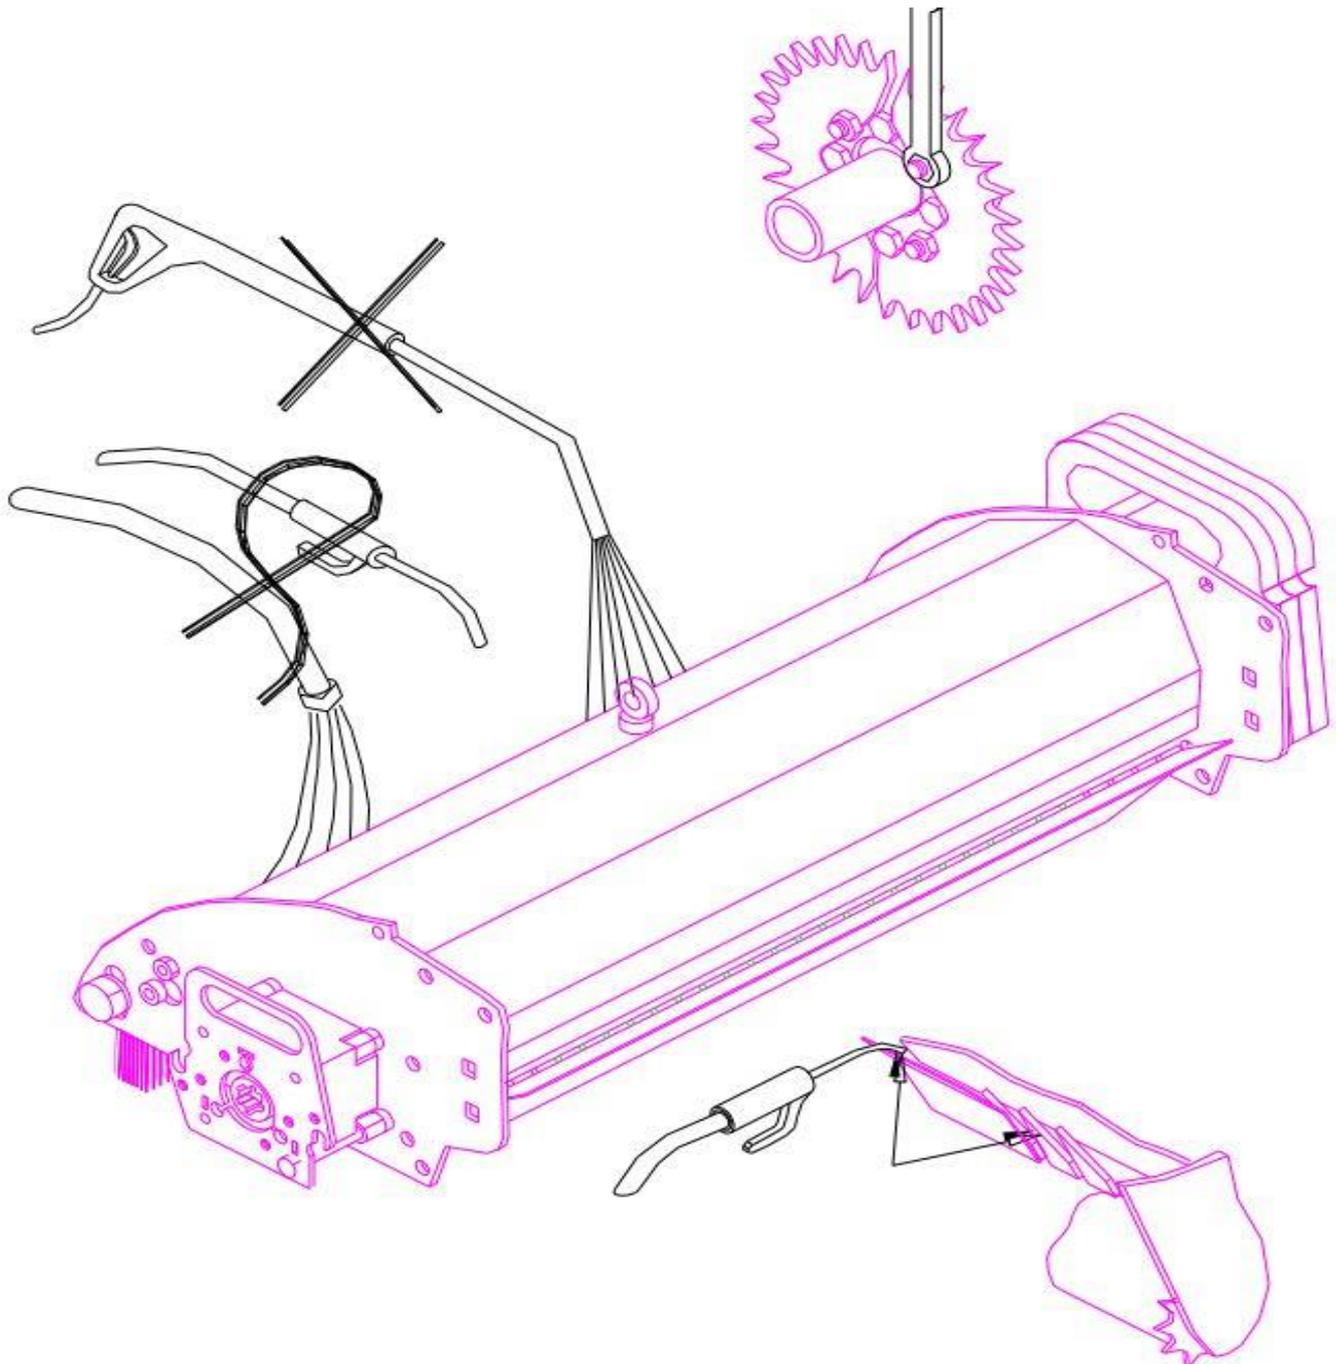

WARRANTY

This GreenTek product is covered by 2 years parts and labour warranty for commercial use, and 3 months warranty for hire use. This is a genuine 'bumper to bumper' warranty and includes everything except components subject to fair wear and tear such as blades, brushes, belts, bearings, drive splines etc, and damage caused by corrosion, abuse or lack of maintenance.

EU DECLARATION

We, MAREDO, Rijksstraatweg16, 3956CR. Leersum, Holland, hereby declare fully on our authority, that the product with serial number as indicated on the machine and in this manual, to which this declaration applies, has been manufactured in line with NEN-EN 292-1, NEN-EN 292-2 and NEN-EN 294, according to the stipulations of The Machine Directive 89/392, updated 93/368/EEG, 93/44/EEG end 93/68/ EEG.



Marinus Reincke Maredo BV Holland.

GUARANTEE

We guarantee that should any defect in materials or workmanship occur within 24 months of the date of purchase we will repair, or at our option, replace the defective part free of charge provided that the fault is reported to us immediately it becomes apparent.

Damage caused by normal wear, misuse or in transit is not covered by this guarantee.

CONTACT US

For further information, support or advice please contact:

info@greentek.uk.com

+44 (0)113 267 7000